

### FlexSQUARE / LED Permanent Beacon 853

## LED Perm. Begcon BWM 115-230VAC MC



Part No.: 853.480.60





MECHANICAL DATA	
Length	85 mm
Width	85 mm
Height	72 mm
Materials	PC PP-GF
Dome colour	Clear
Housing colour	Black
Protection category	IP66 IP67
Connection	Spring-type terminal
cross-sectional area maximum	1,50mm <sup>2</sup> / 16AWG
Cable entry	Membrane grommet
Cable entry minimum	d = 1 mm d = 6 mm
Cable entry maximum	d = 12 mm d = 9 mm
Type of fixing	Base mounting Wall mounting
Working temperature minimum	-25°C
Working temperature maximum	+50°C
Weight with packaging	166 g
Product weight	130 g

ELECTRICAL DATA		
Operating voltage	115-230V	
Operating voltage type	AC	
Operating voltage frequency	50Hz at 230V 60Hz at 115V	
Operating voltage tolerance	+/- 10%	
Rated operational voltage	230 VAC	
Rated operational current	35 mA	
Rated inrush current	1.000 mA	
Protection class	Protection class 2	
Pollution degree	3	
Overvoltage category	II	
Isolation voltage	Ui = 250V; Uimp = 2.500V	

OPTICAL DATA	
Light source	LED
Light colour	MC 3 colours

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



#### FlexSQUARE / LED Permanent Beacon 853

# LED Perm. Beacon BWM 115-230VAC MC

Optical signal image	Permanent
Service life optical	50,000 h maximum


APPROVAL DATA	
Conforms with CE	Yes
WEEE	Yes
Conform with ATEX-directive	No
Conforms with CCC	Yes
Conforms with UL	No
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with AS-I	No
ICAO Certification	No
Conforms with GL	No
Conforms with RoHS CN	No
Conforms with VdS	No

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



### FlexSQUARE / LED Permanent Beacon 853

## LED Perm. Begcon BWM 115-230VAC MC

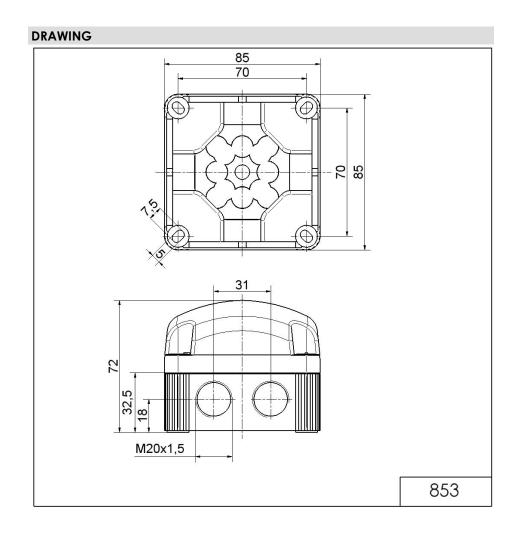

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.